

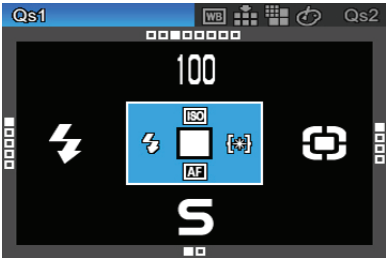

## NOTICE OF FUNCTION CHANGE (SD15 firmware version 1.01)

The following new functions were added to the SD15 camera with the new Firmware update (Firmware version 1.01).

### 1. Addition to the Quick Set menu

In addition to the 4 currently available functions, 4 further functions can be selected from the Quick Set menu. For this addition, the Quick Set menu will have 2 pages and the icon location of the current functions will change. (When the icon location of the current functions change, the icon location displayed in **Camera Info Page(P.33)** will also change.) (\* These 4 added functions can still be changed using the dedicated buttons on the camera)

By pressing the **QS** button again, it is possible to switch to **Qs1** or **Qs2**.

Qs1 (Quick Set Menu 1)	Qs2 (Quick Set Menu 2)
 <ul style="list-style-type: none"><li>▲ ISO sensitivity (P.63) *</li><li>▼ AF Mode (P.52) *</li><li>◀ Flash Mode (P.49) *</li><li>▶ Metering Mode (P.68) *</li></ul>	 <ul style="list-style-type: none"><li>▲ White Balance (P.60)</li><li>▼ Color Mode (P.65)</li><li>◀ Image Quality (P.65)</li><li>▶ Image Size (P.64)</li></ul>

For example, if you wish to change the ISO Setting to 400, press the **QS** button to display Qs1, then set the value to 400 by pressing the ▲ button several times.

By pressing **OK** or the shutter button “half-way”, the settings will be applied and the camera will return to shooting mode.

### 2. Addition to the Key Sound cancellation function

It is possible to cancel the electrical sound of the Self-timer (P.58) and Mirror lock-up function (P.58-59). To cancel the electrical sound, please select [Off] from the [Key Sound] (P.31) in the Camera Set-up menu. (If you wish the camera to emit an electrical sound, please select [On]).